

PHILIPS



AZ 9610

AZ 9613

AZ 9614

(GB) Radio cassette recorder/CD player

(F) Radiocassette/lecteur de CD

(D) Radio-Cassettenrecorder/CD-Spieler

(NL) Radio-cassettrecorder-CD-speler

(E) Radiocasete/lector de CD

(I) Radioregistratore/lettore CD

(S) Kassettradio/CD-spelare

(SF) Radionauhuri/CD-soitin



PHILIPS

MEX México

NOM

Es necesario que lea cuidadosamente su instructivo de manejo.



NOM

DK Danmark

Typeskiltet findes på undersiden af apparaten.

Dette produkt overholder kravene til radio-interferens af Europæisk Fællesskab.

Bemærk: Netafbryderen POWER er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lys-nettet så længe netstikket sidder i stikkontakten.

Advarsel: Usynlig laserudstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

Garanti og service sider 47-50

N Norge

Typeskilt finnes på apparatens underside.

Observer: Netbryteren POWER er sekundært innkoblet. Den innebygde netdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

Garanti og service sider 47-50

GB English

Illustrations
Guarantee and service

page 5
pages 3-4
pages 47-50

English

F Français

Illustrations
Garantie et service après-vente

page 10
pages 3-4
pages 47-50

Français

D Deutsch

Abbildungen
Garantieleistung und Service

Seite 15
Seiten 3-4
Seiten 47-50

Deutsch

NL Nederlands

Afbeeldingen
Garantie en service

pagina 20
pagina's 3-4
pagina's 47-50

Nederlands

E Español

Ilustraciones
Garantía

página 25
páginas 3-4
páginas 47-50

Español

I Italiano

Illustrazioni
Garanzia e servizio

pagina 30
pagine 3-4
pagine 47-50

Italiano

S Svenska

Figurer
Garanti och service

sida 35
sidorna 3-4
sidorna 47-50


Svenska


SF Suomi

Kuvat
Takuu ja huolto


sivu 40
sivut 3-4
sivut 47-50

Suomi

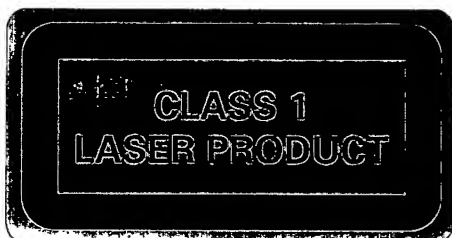


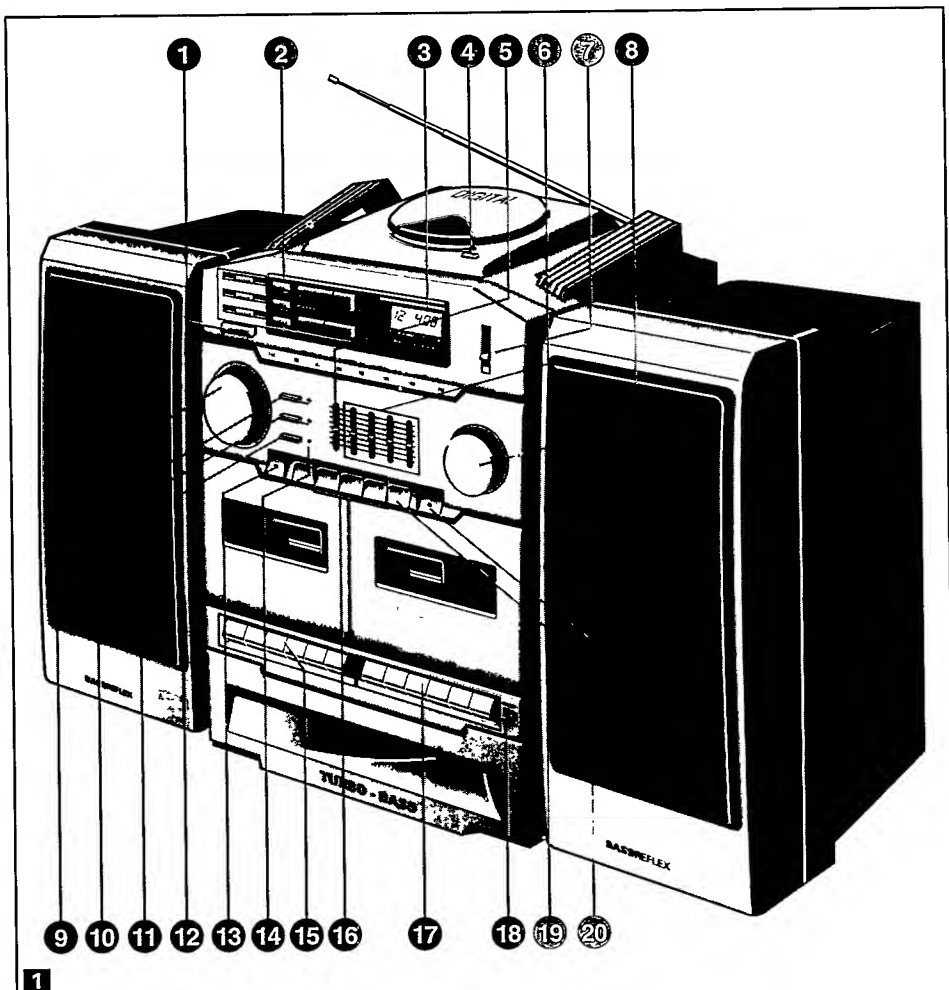










1

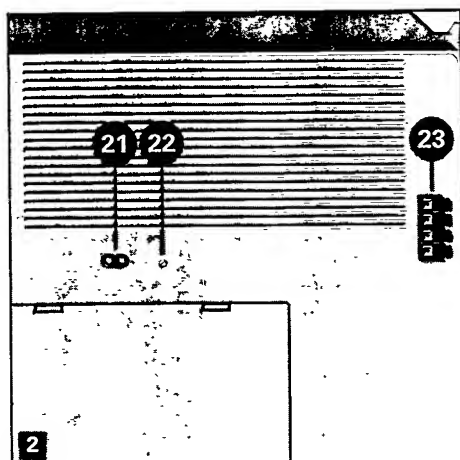

2

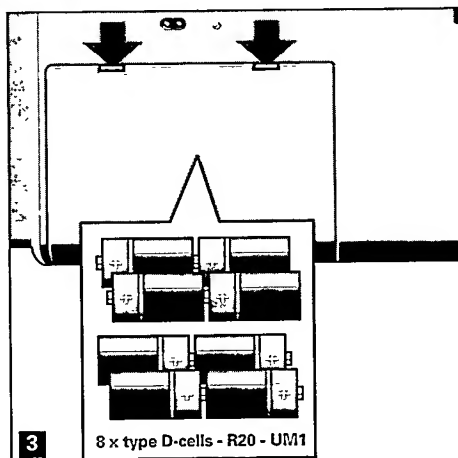

3

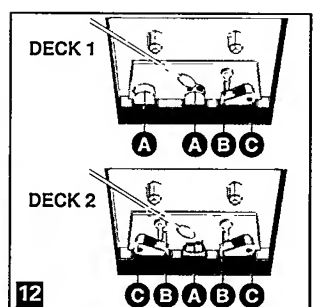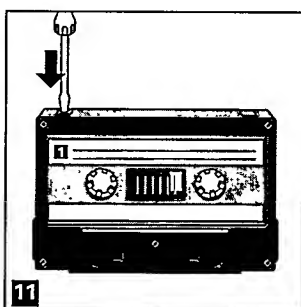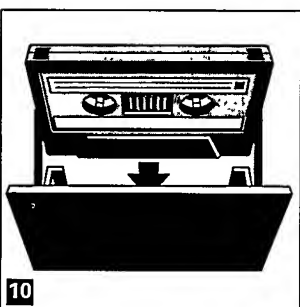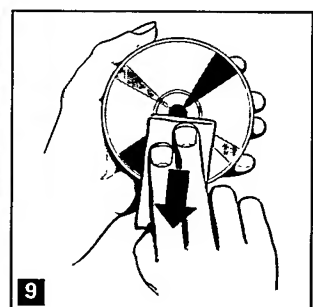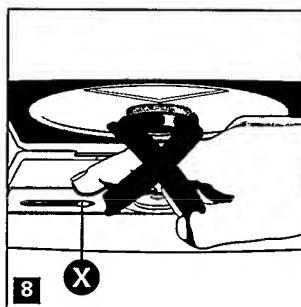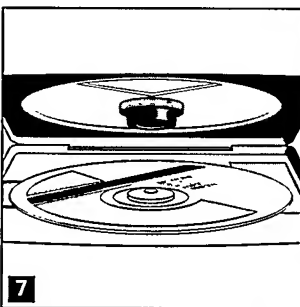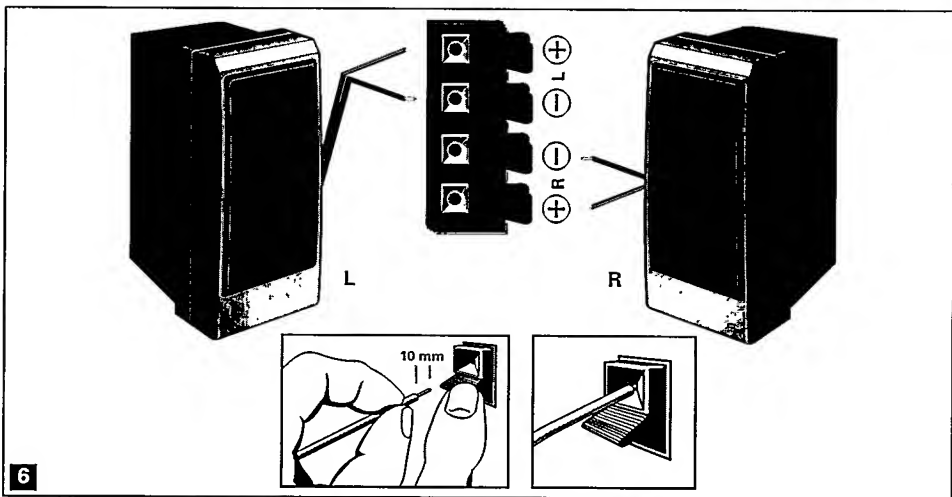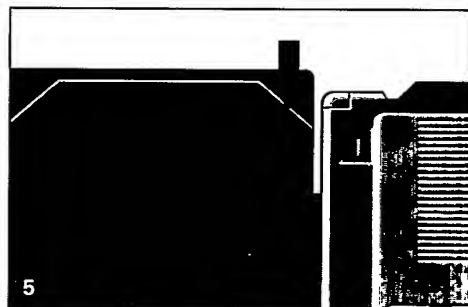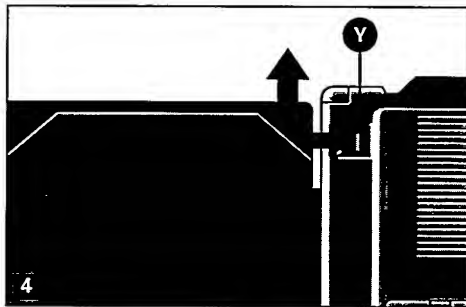

CONTROLSThe illustrations can be found on pages 3 and 4

FRONT PANEL - fig. 1

- ① POWER button
- ② CD keyboard:
II ► - PLAY ► and PAUSE II button
■ - STOP button
◀◀ PREVIOUS/NEXT ▶▶ and ◀◀ SEARCH ▶▶:
◀◀ PREVIOUS/NEXT ▶▶:
 in position playback or STOP, press briefly to jump to a previous ◀◀ or next ▶▶ track
◀◀ SEARCH ▶▶:
 during playback, keep pressed to search fast backward ◀◀ or forward ▶▶
INTROSCAN - to play the beginning of each track
REPEAT - to repeat continuously the disc or the stored selection (memory)
 press again to defeat
SHUFFLE - to play all tracks in a random order
 press again to defeat
CLEAR - to erase the memory
DISPLAY - to display all stored track numbers
STORE - to store the displayed track number
- ③ CD display, shows:
TRACK - the total number of tracks
 and during **PLAY** the number of that track
TIME - the total playing time of the disc
 and during **PLAY** the elapsed time of that track
REPEAT activated
MEMORY - the stored selection is played
SHUFFLE activated
SCAN (INTROSCAN) activated
PAUSE activated
- ④ CD OPEN to open the CD cover
- ⑤ BALANCE control - to adjust the stereo balance
- ⑥ GRAPHIC EQUALIZER tone controls
 100 Hz - lower bass
 400 Hz - upper bass
 2 kHz (2 000 Hz) - mid-range
 10 kHz (10 000 Hz) - treble
- ⑦ BAND selection
- ⑧ TUNING knob
- ⑨ VOLUME control with ON indicator *
- ⑩ SURROUND SOUND button with indicator * -
 press to obtain a surround sound effect
- ⑪ FM MONO/STEREO selection and FM STEREO *
 indicator - lights up when receiving an FM stereo station
- ⑫ HIGH SPEED DUBBING - press **⏏** for high speed dubbing
- ⑬ PHONES stereo headphone socket
- ⑭ TBG bass button with indicator * - press to boost the bass response
- ⑮ deck 1 keyboard (recording and playback):
STOP/EJECT
RECORD
PLAY ►
REWIND
F.FWD
PAUSE
- ⑯ CD - TAPE - TUNER - to select the sound source

- ⑰ deck 2 keyboard (playback):
STOP/EJECT
DIRECTION - to change the play direction
PLAY
◀◀ FAST WINDING ▶▶
PAUSE
- ⑱ TAPE MODE deck 2 reverse selector
 — no reverse
 — single reverse
 — continuous reverse
- ⑲ ◀▶ deck 2 tape direction indicators
- ⑳ MIC MIXING - microphone socket

BACK PANEL - fig. 2

- ① AC MAINS socket for mains lead
- ② VOLTAGE selector (not on all versions)
- ③ SPEAKERS loudspeaker terminals

The type plate is located on the base of the set.

SUPPLY

Batteries

Whenever convenient, use AC mains supply if you want to conserve battery life.

- Open the battery compartment (fig. 3).
- Insert as indicated eight (preferably Alkaline) batteries, type R20, UM1 or D-cells (fig. 3).
- The battery supply is disconnected when the set is connected to the mains. When changing over to battery supply, pull out the plug from the AC MAINS socket ② (fig. 2).
- Remove the batteries if exhausted or if they will not be used again for a long period.

Mains

- Check if the mains voltage as shown on the type plate corresponds to your local mains supply. If it does not, consult your dealer or service organisation. If the set is equipped with a VOLTAGE selector ② (fig. 2), set this selector to the local mains voltage.
- Connect the mains lead to the AC MAINS socket ② (fig. 2) and the wall socket. The mains supply is now switched on.
- To disconnect the set from the mains completely, withdraw the mains plug from the wall socket.

Important note for users in U.K.:

When fitting a mains plug to the mains lead proceed as follows:

The wires in the mains lead are coloured in accordance with the following code: Blue = Neutral, Brown = Live.

These colours may not correspond with the colour markings identifying the terminals in your plug, so proceed as follows:

Connect the Brown wire to the terminal marked L or coloured Red.

Connect the Blue wire to the terminal marked N or coloured Black.

Do **not** connect either wire to the earth terminal in the plug, marked E or \perp or coloured green, or green and yellow.

Note: This apparatus must be protected by a 3 Amp Fuse if a 13 Amp plug is used or, if any other type of plug is used, by a 5 Amp Fuse either in the plug or adapter or at the distribution board. If in doubt consult a qualified electrician.

English

Français

Deutsch

Nederlands

Español

Italiano

Svenska

Suomi

CONNECTIONS - fig. 1 and 2

Stereo headphone socket ⑬ PHONES

For stereo headphones with 3.5 mm plug. Inserting the plug will disconnect the loudspeakers.

Socket for microphone ⑭ MIC MIXING

For a microphone with 3.5 mm plug.

To avoid disturbing noises, reduce the VOLUME ⑨ before connecting the microphone.

- 'Public address': you can reproduce your voice amplified through the loudspeakers: press function button ⑮ TAPE.
- Disc-jockey: you can mix your voice with the CD, TAPE or TUNER: press function button ⑮ CD, TAPE or TUNER. You can record it all on deck 1.
- Adjust the sound with the controls VOLUME ⑨, BALANCE ⑥, GRAPHIC EQUALIZER ⑥, SURROUND SOUND ⑩ and TBG ⑭.

If a howling sound occurs, keep the microphone away from the loudspeakers or reduce the VOLUME ⑨.

Disconnect the microphone when not in use.

SPEAKERS - loudspeaker terminals ②

- Connect the supplied loudspeakers (or others with an impedance of 4 to 8 Ohms) as shown in fig. 6. Connect the coloured wire to the red terminal.
- Using knob ⑦ you can release and take off the loudspeakers as shown in fig. 4.
- See fig. 5 to attach the loudspeakers.

TUNER

RADIO RECEPTION

- Switch on the set using the POWER button ①.
- Press the function button ⑮ TUNER.
- Adjust the sound with the controls VOLUME ⑨, BALANCE ⑥, GRAPHIC EQUALIZER ⑥, SURROUND SOUND ⑩ and TBG ⑭.
- Select the wave band using the BAND selector. ⑦. (SW and LW not on all versions).
- For FM, pull out the telescopic aerial. To improve FM-reception, incline and turn the aerial. Reduce its length if the FM-signal is too strong (very close to a transmitter).
- For AM/MW and LW (Medium and Long Wave), the set is provided with a built-in aerial, so there is no need to use the telescopic aerial. The aerial can be directed by turning the whole set.
- For Short Wave (SW), the telescopic aerial must be pulled out and placed in the vertical position. To improve reception, vary the length of the aerial.
- Tune to a radio station using the TUNING knob ⑧.
- When FM STEREO * ⑪ lights up, you are receiving a FM-stereo transmitter. A disturbing noise, due to a weak FM-stereo signal, can be suppressed by pressing the FM MONO/STEREO button ⑮. FM STEREO * ⑪ will then go out and you will hear (and record) the FM programme in mono.
- Always switch off the set after use with POWER button ①.

PLAYING A DISC

- Switch on the set using the POWER button ①.
 - Press the function button ⑮ CD: on the display appears - - - - -.
 - Adjust the sound with the controls VOLUME ⑨, BALANCE ⑥, GRAPHIC EQUALIZER ⑥, SURROUND SOUND ⑩ and TBG ⑭.
 - Press CD OPEN ④ to open the disc cover.
 - Insert the disc, printed side facing up (fig. 7).
 - Close the cover. The CD-player starts and scans the contents list of the disc. After that, the total playing time and the number of tracks appear on the display and the CD-player stops.
 - Playback will start by pressing PLAY ►. As soon as playback starts, the display shows the track number / and the elapsed playing time of the first title. When the second title is reached the track number 2 appears, etc.
 - For brief interruptions, press PAUSE II; the word PAUSE appears. To continue playback, press PAUSE again.
 - To stop playback, press STOP ■.
- The CD player also goes to position STOP:
- by pressing CD OPEN ④;
 - when the end of the disc is reached;
 - if you press function button ⑮ TUNER or TAPE;
 - by switching off the set;
 - if the batteries run down or if the power supply is interrupted in another way.
 - To take out the disc, open the disc cover by pressing CD OPEN ④. Open the disc cover only if the CD-player is in position STOP.
 - Always switch off the set after use with POWER button ①.

Remarks

- If the battery voltage is not sufficient any more for playing a disc, the CD-player will not start.
- If - - - - - does not disappear, the CD-player cannot read the disc. Possible causes are:
 - you inserted the disc the wrong way: the label should face up (fig. 7);
 - the surface of the disc is badly scratched or dirty, see 'Maintenance';
 - the lens (X) (fig. 8) is steamed up because of a sudden transition from a cold into a warm environment; do not clean the lens, but let the set acclimatize for a while.

REPEAT

If you want to repeat the whole disc (or the programmed selection) continuously, press REPEAT: the word REPEAT appears.

The REPEAT function can only be switched on during playback: PLAY, SHUFFLE or INTROS CAN.

To defeat the REPEAT-function, press REPEAT again; the word REPEAT disappears.

COMPACT DISC

INTROSCAN

The INTROSCAN function can be switched on from the STOP, PLAY and SHUFFLE mode.

- Press INTROSCAN; the word SCAN appears. Only the first few seconds of each track are played, but always from track number 1.
- The moment you press PLAY ► or SHUFFLE, the INTROSCAN function is defeated (the word SCAN disappears) and the disc is played in the normal way from this track number.
- If you press ◀ or ▶, the INTROSCAN function remains operative and the beginning of the next ▶ or previous ◀ track is played.
- If INTROSCAN is not defeated by pressing PLAY ►, STOP ■ or SHUFFLE, the CD player returns to STOP as soon as the end of the disc is reached.

SHUFFLE

If you want to play all tracks in a random order, press SHUFFLE: the word SHUFFLE appears.

The SHUFFLE function can be switched on from the STOP, PLAY, REPEAT and INTROSCAN mode.

To defeat the SHUFFLE-function, press SHUFFLE again and the word SHUFFLE disappears.

◀ PREVIOUS/NEXT ▶ - SEARCH ▶▶

1. ◀ PREVIOUS/NEXT ▶

Press briefly (less than 1 second)

a. During PLAY and INTROSCAN:

▶▶ - go to the next track (title)

You can jump to the next title by pressing ▶▶ once. If you want to skip more than one track, then press ▶▶ more than once until the display shows the desired track number.

◀◀ - go to the previous track (title)

If you want to repeat the running title from the beginning, press ◀◀ once.

If you want to repeat one of the previous titles, press ◀◀ more than once until the display shows the required track number.

b. In position STOP:

In position STOP with a disc inserted you can select the desired title using ◀◀ and ▶▶ until the display shows the required track number.

2. ◀ SEARCH ▶▶

During playback, keep ▶▶ for search forward and ◀◀ for search backward pressed. The disc is played partly and at high speed, however, the sound is still recognizable.

Release the button as soon as you recognize the required passage: the disc will be played in the normal way from this passage.

If the button is pressed longer than 10 seconds, the search speed increases.

PROGRAMMING TRACK NUMBERS

You may select a number of tracks and store these in the memory in the desired sequence. When playing, you will only hear the stored titles in the selected sequence. At most, 20 tracks can be stored in the memory. You may store each track more than once.

Manual selecting

- Load the disc, but do not press PLAY ► yet.
- Select the desired track using the buttons ◀◀ and ▶▶ until the display shows the required track number.
- Store this track by pressing STORE.
- Select and store in this way all desired titles.

Storing during INTROSCAN

- Press INTROSCAN to play the first few seconds of each track.
- Press STORE as soon as you recognize a desired title.

Storing during PLAY

- During normal PLAY you may store the running title by pressing STORE.

– After pressing STORE the character P (PROGRAM) appears, indicating that the track has been stored.

– Store all desired titles in the required sequence. You may store each track more than once.

– At most, 20 tracks can be stored in the memory. When the memory is full, the character F (FULL) appears.

– When pressing DISPLAY, the display will show in sequence all stored track numbers.

– You can simply erase the whole memory by pressing CLEAR: the character C for CLEAR appears now.

The contents of the memory are also erased:

- by opening the disc cover using CD OPEN ④;
- if you press function button ⑩ TUNER or TAPE;
- by switching off the set;
- if the batteries get exhausted or if the power supply is interrupted in another way.

How to play the stored selection

To play your selection, the CD-player should be in position STOP; then press PLAY ►: now, the word MEMORY appears.

RECORDING - on deck 1 only

Preparation

- Switch on the set using the POWER button ①.
- Press EJECT to open the cassette holder.
- Insert the cassette into deck 1 (fig. 10).

For recording you must use a cassette on which the tabs (fig. 11) are not broken out.

At the very beginning of the tape, no recording will take place during the first 7 seconds when the leader tape passes the recorder heads.

- When monitoring during recording, adjust the sound with the controls VOLUME ⑨, BALANCE ⑤, GRAPHIC EQUALIZER ⑥, SURROUND SOUND ⑩ and TBG ⑪. These controls do not affect the recording.

Recording from the CD-player

- Press the function button ⑫ CD. It's not necessary to start the CD-player separately: if you press RECORD, the CD-player starts automatically:
 - if the CD-player is in position STOP, recording will start from the beginning of the disc (or from the beginning of the programmed selection);
 - if the CD-player is in position PAUSE, recording will start from this very position;
 - in position INTROSCAN the CD-player will first return to the beginning of that track and then recording will start.

Recording from the radio

- Press the function button ⑬ TUNER.
- Tune to the desired radio station.
- In case of FM radio recordings, set the FM MONO/-STEREO button ⑭ to the desired position.

Microphone recording

- Connect the microphone to the socket MIC MIXING ⑮.
- Microphone only: press button ⑫ TAPE;
- Mixing with CD: press button ⑫ CD;
- Mixing with a cassette in deck 2: press button ⑫ TAPE and on deck 2 PLAY;
- Mixing with radio: press button ⑬ TUNER.
- If a howling sound occurs:
 - keep the microphone away from the loudspeakers,
 - or reduce the VOLUME ⑨,
 - or use headphones for monitoring.

Starting and stopping the recording

- Start recording by pressing RECORD; in doing so, PLAY ► is pressed too.
- For brief interruptions, press PAUSE. To restart recording, press this button once more.
- To stop recording, press STOP. On pressing again, the cassette holder will open.
- Always switch off the set after use with POWER button ①.

DUBBING - Copying from deck 2 to 1

When dubbing, it is recommended to use fresh batteries or to connect the set to the mains.

- Press function button TAPE ⑫.
- Set the HIGH SPEED DUBBING button ⑯ to:
 - for normal speed copying;
 - for high speed copying.

Do not press this button during dubbing.

- Press both EJECT buttons and insert a recorded cassette into deck 2 and a cassette which is suited for recording into deck 1 (fig. 10).

- For deck 2, select the play direction using the DIRECTION button.

- Press on deck 1 PAUSE and RECORD.

- To start dubbing, press on deck 2 PLAY.

Dubbing continues also if the deck 2 play direction is reversed (automatically or by hand using DIRECTION).

- By pressing PAUSE on deck 1, you can omit undesired passages while deck 2 continues. To restart copying, press PAUSE once more.

- Using PAUSE of deck 2, deck 1 will record a blank part.

- To stop dubbing, press both STOP buttons.

COPYRIGHT

Recording is permissible insofar as copyright or other rights of third parties are not infringed.

For U.K. only: Recording and Playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

FAST WINDING

- Fast winding to the left: press REWIND (deck 1) or ◀ (deck 2).
- Fast winding to the right: press F.FWD (deck 1) or ▶ (deck 2).
- To stop fast winding, press STOP.

SAFEGUARDING AGAINST ERASURE

Keep the cassette side to be safeguarded in front of you (fig. 11) and break out the left tab. Now, recording on this side is no longer possible.

You can render this safeguard ineffective by covering the aperture with a piece of adhesive tape.

CASSETTE PLAYBACK

Playback on deck 1 or 2

- Switch on the set using the POWER button ①.
- Press the function button ⑯ TAPE.
- Adjust the sound with the controls VOLUME ⑨, BALANCE ⑤, GRAPHIC EQUALIZER ⑥, SURROUND SOUND ⑩ and TBG ⑭.
- Press EJECT and insert a recorded cassette (fig. 10).
- For playback on deck 2, set the TAPE MODE selector ⑱ to:

⎓ no reverse, to play one cassette side. So, the deck stops at the end of the tape.

↵ single reverse, to play both cassette sides. At the end of the first cassette side, the tape direction is reversed and the TAPE MODE selector ⑱ jumps to position ⎓. The deck stops at the end of the second cassette side.

↻ continuous reverse, for non-stop playback: the deck reverses the play direction whenever reaching the end of the cassette.

- Select the tape direction using DIRECTION.
- Press PLAY and playback will start.

On deck 2, you can reverse the play direction at any moment by pressing DIRECTION. The tape direction indicators <D> ⑲ show the actual deck 2 play direction.

- To stop playback, press STOP.
- Always switch off the set after use with POWER button ①.

Continuous play

Deck 2 plays both cassette sides and at the end of the cassette, deck 1 will start playing.

- Press function button TAPE ⑯
- Press both EJECT buttons and insert a recorded cassette into both decks (fig. 10).
- Set TAPE MODE selector ⑱ to ↵ to play both cassette sides once.
- Select the play direction using DIRECTION.
- Press on deck 2 PLAY and playback will start.
- Press on deck 1 PAUSE and then PLAY ▶. As soon as deck 2 stops (at the end of the cassette or when its STOP button is pressed), PAUSE is released and deck 1 will start playing back.
- When deck 2 is started again by pressing PLAY, deck 1 is muted and you will hear deck 2 again.
- To stop playback, press STOP.

MAINTENANCE

CD-player and discs

- The lens ⑫ (fig. 8) should never be touched or cleaned.
- The lens may steam up when the set is taken from a cold into a warm environment. Playing a disc is not possible then. Do not clean the lens, but let the set acclimatize for a while.
- Always pick up the disc by the edge and put it back in its box immediately after use.
- To clean, breath on the disc and wipe it off in a straight line from centre to edge (fig. 9) using a soft, lint-free cloth. Cleaning agents may harm the disc.

Cassette decks

To ensure a good recording and playback quality, clean the parts A, B, C indicated in fig. 12 after every 50 hours of operation or, on average, once a month.

- Open the cassette holders by pressing EJECT.
- Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid.
- Clean the magnetic heads A and the capstans B.
- Clean the rubber pressure rollers C (fig. 12).

Cleaning of the magnetic heads A can also be done by playing the cleaning cassette SBC 114 through once as an ordinary cassette.

Remarks

- The CD-player and the cassette decks are fitted with self-lubricating bearings which must not be oiled or greased.
- Fingerprints, dust and dirt on the apparatus can be removed using a soft, clean and slightly damp leather cloth. Do not use any cleaning agents, since they may affect and harm the cabinet.
- Keep the set, batteries, discs and cassettes away from rain, moisture, sand and excessive heat, e.g. near heating equipment or in cars parked in the sun.

This product complies with the radio interference requirements of the European Community.

GUARANTEE AND SERVICE FOR UNITED KINGDOM

Philips sell this product subject to the understanding that if any defect in manufacture or material shall appear in it within 12 months from the date of consumer sale, the dealer from whom the product was purchased will arrange for such defect to be rectified without charge, provided:

1. Reasonable evidence is supplied that the product was purchased within 12 months prior to the date of claim
 2. The defect is not due to use of the product for other than domestic purposes, or on an incorrect voltage, or contrary to the Company's operating instructions, or to accidental damage (whether in transit or otherwise), misuse, neglect or inexpert repair.
- Products sent for service should be adequately packed as no liability can be accepted for damage or loss in transit, and name and address must be enclosed.

Facts about free service

When service is required, apply to the dealer from whom the product was purchased. Should any difficulty be experienced in obtaining Service, e.g. in the event of the dealer having ceased to trade, you are advised to contact Philips Service.

These statements do not affect the statutory rights of a consumer.

If you have any questions which your dealer cannot answer, please write to **Philips Consumer Relations, P.O. Box 298, 420 London Road, CROYDON CR9 3DR, or (01) 689-2166 Consumer Advice.**

Please retain this card. Produce if service is required

GUARANTEE AND SERVICE VALID FOR IRELAND

This apparatus is made of high quality material and great care has been taken in its manufacture

Philips, therefore, give you a guarantee on parts against failures arising from faulty workmanship or material for 12 months after date of purchase. This guarantee is valid on the condition that this certificate is completed and signed immediately on delivery of the apparatus. In case of failure ask your dealer for further information.

If you have any questions which your dealer cannot answer, you may apply to **Philips Electrical (Ireland) Ltd., Service Department, Newstead, Clonskeagh, DUBLIN 14, ☎ 69 33 55.**

GUARANTEE AND SERVICE VALID FOR AUSTRALIA

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product.

The Philips product carries the following warranties:

C-series Hi-Fi systems 12 months Compact Disc Players: 12 months. Home Audio Systems 6 months Clock radios, portable radios, cassette recorders, cassette players and radio recorders 90 days

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased

Note: Please retain your purchase docket to assist prompt service

Conditions of this warranty

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.
2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

Philips Consumer Products Division, Technology Park, Fittree Drive, Australia Centre, HOMEBUSH 2140, New South Wales

GUARANTEE AND SERVICE FOR NEW ZEALAND

Thank you for purchasing this quality Philips product. The document you are now reading is your guarantee card.

Guarantee

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased

Conditions

1. The product must have been purchased in New Zealand, and this guarantee card completed at time of purchase (this is your proof of the date of purchase).
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician
4. Reasonable evidence (in the form of a sales docket or completed guarantee card) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee. This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

the Guarantee Controller, Philips New Zealand Ltd, P.O. Box 1041, AUCKLAND - ☎ (09) 605-914

GUARANTEE EN SERVICE IN NEDERLAND

• Wat wordt gegarandeerd?

Philips Nederland B.V. garandeert dat dit apparaat kosteloos wordt hersteld indien - bij normaal particulier gebruik volgens de gebruiksaanwijzing - binnen 12 maanden na aankoopdatum fabricage- en/of materiaalfouten optreden.

• Wie voert de garantie uit?

De zorg voor de uitvoering van de garantie berust bij de handelaar die u het apparaat verkocht heeft. De handelaar kan daarbij eventueel een beroep doen op een der Philips Service vestigingen.

• Uw aankoopbon + de identificatiekaart

De identificatiekaart is uw garantierechts. U kunt alleen een beroep doen op de bovenschreven garantie tegen overlegging van de aankoopbon (factuur, kassabon of kvitantje), in combinatie met de identificatiekaart, waarop typenummer en serienummer zijn vermeld. Uit de aankoopbon dienen duidelijk de aankoopdatum en de naam van de handelaar te blijken. Mocht het noodzakelijk zijn deze documenten aan uw handelaar af te geven, dan kunt u hem daarvoor een ontvangstbewijs vragen.

De garantie vervalt indien op de genoemde documenten iets is veranderd, doorgehaald, verwijderd of onleesbaar gemaakt. De garantie vervalt eveneens indien het typenummer en/of serienummer op het apparaat is veranderd, doorgehaald, verwijderd of onleesbaar gemaakt.

• Hoe te handelen bij een storing?

Om onnodige kosten te voorkomen, raden wij u aan bij storingen eerst nauwkeuring de gebruiksaanwijzing te lezen. Indien de gebruiksaanwijzing daarin geen uitkomst biedt, kunt u uw handelaar raadplegen en/of hem het apparaat ter reparatie aanbieden.

• ...en bij problemen?

Bij problemen omtrent de garantie-uitvoering kunt u zich in verbinding stellen met: **Philips Nederland B.V. Afdeling Consumentenbelangen, Antwoordnummer 500 5600 VB EINDHOVEN (postzegel met nommer), ☎ 040-78 11 78.**

GUARANTEE EN SERVICE IN BELGIË EN LUXEMBOURG

In België en Luxemburg gelden uitsluitend de garantiebepalingen die in het door uw handelaar verstrekte garantierechts staan aangegeven.

• **Voor België:** Indien u na de aankoop van een of ander Philips apparaat problemen heeft met bijv. de voeding, de werking, of het gebruik ervan, en indien de verkoper die u deze apparaten verkocht heeft moeilijkheden ondervindt om deze problemen op te lossen, stelt u zich dan telefonisch of schriftelijk in verbinding met onze dienst: **'Klanten Contact', de Broeckereplein 2, 1000 BRUSSEL - ☎ 02/211 91 11**

GUARANTEE EN BELGIE ET LUXEMBOURG

Pour les conditions de garantie en Belgique et Luxembourg veuillez vous référer à la carte de garantie que le revendeur doit vous remettre.

• **Pour la Belgique:** Si après l'achat de l'un ou l'autre appareil Philips vous avez des problèmes concernant par exemple la garantie, le fonctionnement ou l'utilisation de l'appareil et que le distributeur qui vous a vendu ces appareils éprouve des difficultés pour les résoudre, prenez contact, soit par téléphone, soit par écrit avec notre service: **'Contact Clientèle', Place de Broeckère 2, 1000 BRUXELLES - ☎ 02/211 91 11**

GUARANTEE FÜR DIE SCHWEIZ

Philips-Geräte sind aus einwandfreiem Material und mit großer Sorgfalt hergestellt worden. Dieses Gerät wird Ihnen gute Dienste leisten, sofern es sachgemäß bedient und unterhalten wird. Trotz aller Sorgfalt ist das Auftreten von Fehlern nicht ganz auszuschließen. Im Falle eines Defektes wenden Sie sich bitte unter Vorlage des Einkaufsbeleges und des Gerätepasses an das Fachgeschäft, in welchem Sie das Gerät erworben haben.

GUARANTEE POUR LA SUISSE

Les appareils Philips ont été fabriqués au moyen de matériaux de toute première qualité et avec beaucoup de soins. Cet appareil vous donnera encore plus de satisfaction si l'utilisation et l'entretien sont suivis selon le mode d'emploi. Malgré tous les soins apportés, l'apparition de défauts n'est pas exclue. Dans ce cas, nous vous serons reconnaissants de bien vouloir vous adresser directement chez votre vendeur muni du passeport de l'appareil ainsi que de la facture s'y rapportant.

GUARANZIA PER LA SVIZZERA

Gli apparecchi Philips sono prodotti con materiali di prima qualità e assemblati con la massima cura. Essi vi offriranno un ottimo servizio, in cambio di un accurato uso e manutenzione. Malgrado tutti i nostri sforzi, non è escluso che possano avvenire dei guasti. In caso di difetto Vi preghiamo di rivolgervi al Vostro fornitore specializzato, portando con Voi il passaporto assieme ai documenti d'acquisto.

GUARANTEE IN ÖSTERREICH

In Österreich ist die Gewährleistung für Verträge zwischen Händler und Käufer gesetzlich geregelt. Zur Geltendmachung des Gewährleistungsanspruches dient der Kaufbeleg.

Die Österreichische Philips Industrie GmbH unterstützt die Gewährleistungsverpflichtung ihres Händlers für Neugeräte, die der Handel über die Österreichische Philips Industrie GmbH bzw. Horny Vertriebs GmbH bezogen hat, dadurch, daß für den Käufer innerhalb von 6 Monaten ab Verkaufsdatum Funktionsmängel (Fabrikations- oder Materialfehler) in einer unserer Service-Filialen kostenlos, d.h. ohne Verrechnung von Arbeitszeit und Material, behoben werden. Schäden, die durch äußere Einflüsse, unsachgemäße Behandlung oder unsachgemäßen Fremdeingriff entstanden sind, sowie Gehäusefehler oder Glasbruch, sind von dieser Zusage ausgeschlossen.

Philips Zentrale Kundeninformation:

– 1101 WIEN, Triesterstraße 64, ☎ 0222-60101-DW 1620 oder 1663

– 9020 INNSBRUCK, Klostergasse 4, ☎ 05222-74694

– 9020 KLAGENFURT, Villacher Straße 161, ☎ 0463-22397-DW 94

Philips Service-Organisation:

– 1232 WIEN, Ketzergasse 120, ☎ 0222-8662-0

INFORMATION SUR LA GARANTIE ET LE SERVICE APRÈS-VENTE EN FRANCE

Cet appareil PHILIPS a été fabriqué avec le souci de vous donner entière satisfaction. Sa garantie contractuelle est de la responsabilité du point de vente.

Cette garantie qui peut varier tant en durée qu'en contenu, ainsi que les modalités de service après-vente, doivent vous être précisées lors de l'achat par le vendeur qui, de plus, vous conseillera en cas de panne ou de défaillance.

A cet effet, il vous est demandé de conserver soigneusement votre facture et/ou le présent document dûment rempli et signé et/ou le contrat de garantie qui vous aura été remis conformément au décret N° 87-1045 du 22 décembre 1987.

Pour sa part, PHILIPS, soucieux de l'intérêt des consommateurs, apporte sa contribution aux efforts de points de vente, que ce soit en matière de garantie ou de service après-vente:

- matériellement, par la formation, l'assistance technique, la fourniture de pièces détachées,
- financièrement, selon des modalités précises définies entre PHILIPS et les points de vente.

Reappel: Vous bénéficiez en tout état de cause des dispositions des articles 1641 et suivants du code civil relatifs à la garantie légale.

Aucune garantie ne peut être mise en œuvre si la détérioration résulte d'une cause étrangère à l'appareil ou du non respect des prescriptions d'utilisation.

Service consommateurs PHILIPS:

B.P. 49 - 77423 MARNE LA VALLÉE CÉDEX 2

☎ (16-1) 64 80 54 54 - Minitel 36 15 code: PHILIPS

SNC PHILIPS ELECTRONIQUE DOMESTIQUE - RCS NANTERRE B 333 6760 833

GARANTIE FÜR DIE BUNDESREPUBLIK DEUTSCHLAND

Philips-Geräte sind Markenartikel, die mit größter Präzision nach modernsten Fertigungsmethoden und mit einem Höchstmaß an Sorgfalt hergestellt werden. Das Gerät wird Ihnen gute Dienste leisten, vorausgesetzt daß Sie es sachgemäß bedienen und unterhalten. Trotz aller Sorgfalt ist das Auftreten von Fehlern nicht auszuschließen. Ihr Partner für die Behebung derartiger Fehler ist Ihr Fachhändler, bei dem das Gerät erworben wurde. Falls ein Reklamationsfall eintritt, wenden Sie sich bitte unter Vorlage des Einkaufsbeleges und des Gerätepasses an Ihren Fachhändler.

GARANZIA E ASSISTENZA VALDE PER L'ITALIA

Questo apparecchio è stato realizzato con materiali di prima qualità e costruito con la massima cura. La Philips comunque fornisce all'acquirente una Garanzia di buon funzionamento secondo le condizioni stabilite dall'ANIE.

Tale Garanzia decorre dalla data di acquisto ed ha la durata di **6 mesi**. Per aver diritto alla Garanzia è necessario che questo certificato riporti i dati di Modello e Matricola dell'apparecchio, la data di acquisto ed il timbro del rivenditore; inoltre per tutti gli apparecchi per i quali è prevista la "ricevuta fiscale" (o altro documento di consegna) il documento stesso dovrà essere conservato con questo certificato a certificazione della data d'acquisto.

In caso di necessità il prodotto dovrà essere fatto pervenire al Centro di Assistenza più vicino il cui recapito è pubblicato sugli elenchi telefonici della zona di residenza alla voce Philips.

Per questo apparecchio Philips offre un Abbonamento all'Assistenza Tecnica. Per informazioni rivolgersi ai Centri di Assistenza o al servizio Consumatori Philips. **Philips S.p.A., Viale le Fulvio Testi 327, 20162 MILANO, ☎ 1678-20026**

CONDIÇÕES VÁLIDAS PARA PORTUGAL

A Philips Portuguesa, SA, assegura ao comprador deste aparelho garantia contra qualquer defeito de material ou fabrico, pelo prazo de 6 meses, contado a partir da data de aquisição. As agulhas de fonocaptores não têm qualquer garantia.

A Philips Portuguesa, SA, anula a garantia ao aparelho desde que se verifique ser a deficiência motivada por acidente, utilização incorrecta, causas externas, ou nos casos em que apresente vestígios de ter sido violado, ajustado ou reparado por entidade não autorizada. Também será considerada nula a garantia se este certificado apresentar rasuras ou alterações.

A Philips Portuguesa, SA, obriga-se a prestar a garantia referida somente nos seus Serviços Técnicos ou nos Concessionários de Serviço autorizados. As despesas e riscos de transporte de e para as oficinas serão sempre da responsabilidade do comprador.

Nota: Para que o aparelho seja assistido ao abrigo da garantia, é indispensável que seja apresentado este certificado, devidamente preenchido e autenticado, por vendedor autorizado, aquando da sua aquisição.

Se sobre esta garantia necessitar algum esclarecimento que o vendedor não lhe possa dar, deve dirigir-se a **Philips Portuguesa, SA, - Outurela - Camaxide - 2795 LINDA A VELHA - ☎ 418 00 71/9**

- R. Eng. Ezequiel de Campos, 182 - 4100 PORTO - ☎ 67 26 13

GARANTI OG SERVICE FOR DANMARK

De er nu ejer af et apparat, hvis konstruktion er baseret på erfaring og lang tids forskning. Philips garanterer for kvaliteten, og hvert led i fabrikationen er underkastet stadig kontrol. Alle henvendelser om fejl under garantien skal rettes til den forhandler, der har udlævert og underskrevet garantibeviset, hvorpå de gældende garantibestemmelser tillige er anført. Garantien er kun gældende i købslandet.

GARANTI I NORGE

De er nåer av et apparat som er basert på lang tids forskning og erfaring. Philips garanterer for kvaliteten, men hvis en feil skulle oppstå bes De ta kontakt med den forhandler som har utlevert og underskrevet garantibeviset. Garantien gjelder kun i kjøpslandet hvor de gjeldende garantibestemmelser må følges.

Hvis De trenger ytterligere opplysninger utover de forhandleren kan gi Dem, kan De henvende Dem til: **Norsk A/S Philips, Avd. Audio/Video, Sandstuveien 70, OSLO 6 - ☎ 02 - 68 02 00**

TAKUU JA HUOLTO

Tämän tuotteen takuun on pitkäaikainen, kokemuksella tehdyin tutkimustöin tulos. Jatkuvan eri tuotantovaiheissa tehtävän laatu tarkkailun vuoksi Philips takaa tuotteen laadun.

Tarkemmat tiedot takuuehdoista saat Philips-myyjältä tai alla olevasta osoitteesta.

Oy Philips AB, Siniikkilintie 3, 02630 ESPOO - ☎ (352-0)-50251

☎ Oy Philips AB, P.O. Box 75, 02631 ESPOO

GARANTÍA PARA MÉXICO

Este aparato está fabricado con materiales de alta calidad y ha sido cuidadosamente verificado. Philips, por lo tanto, da a usted una garantía de 12 meses a partir de su fecha de compra.

La garantía ampara la reposición de las piezas defectuosas debidas a fallas en su montaje o en los materiales, incluyendo la mano de obra necesaria para su reemplazo en nuestras Sucursales o talleres autorizados.

En caso de fallas en su aparato le rogamos se sirva poner en contacto con su distribuidor.

Esta garantía no cubrirá las averías que resulten como consecuencia de una instalación incorrecta del aparato, manifestado maltrato o uso inadecuado del mismo.

Philips se obliga a reparar y devolver a usted su aparato en un plazo no mayor de 30 días hábiles contados a partir de la fecha de haber ingresado su aparato a uno de nuestros talleres.

Para que esta garantía sea válida, es necesario que el certificado que figura en la parte posterior de este instructivo haya sido debidamente llenado en el momento de la compra del aparato.

En caso de extravío del certificado con la presentación de la factura o remisión de su aparato podrá hacer efectiva la garantía correspondiente.

Si usted tiene alguna duda o pregunta que no le pueda solucionar su distribuidor, por favor ponerse en contacto con **Oficinas Centrales de Servicio, Av. Coyoacán No. 1051, Col. del Valle, 03100 MÉXICO, D.F.**

☎ 5-75-20-22 o 5-75-01-00

PHILIPS IBERICA, S.A.E.

Garantiza este aparato durante 6 meses, a partir de la fecha de adquisición, de la forma siguiente:

1. Cubriendo cualquier defecto de fabricación o vicio de origen, así como la totalidad de sus componentes, incluyendo la mano de obra necesaria para el reemplazo de las piezas defectuosas, por nuestros talleres autorizados.

2. Esta garantía no cubrirá la avería, si es consecuencia de incorrecta instalación del aparato, manifestado maltrato o uso inadecuado del mismo. La calificación de las averías corresponderá únicamente a los servicios técnicos de los talleres autorizados Philips.

3. Las reparaciones que pudieran producirse durante el período de vigencia de la presente garantía se efectuarán, bien en el domicilio del usuario, bien en los talleres autorizados Philips, a libre elección y criterio de ésta última.

4. Transcurrido un mes desde la fecha de adquisición del aparato, todos los gastos de desplazamiento del personal técnico para proceder al examen y/o reparación del aparato correrán por cuenta del usuario de acuerdo con las tarifas establecidas para este concepto.

5. En todas las reparaciones se deberá acompañar al aparato factura de compra y la presente garantía debidamente cumplimentada, con la indicación exacta de la fecha de venta del aparato.

6. En todo caso, el titular de la garantía tiene los derechos mínimos reconocidos por la Ley.

Titular (Comprador)

Domicilio

ΠΛΗΡΟΦΟΡΙΕΣ ΓΙΑ SERVICE ΚΑΙ ΕΓΓΥΗΣΗ ΣΤΗΝ ΕΛΛΑΔΑ

Η συσκευή έχει ελεγχθεί σχολαστικά, η λειτουργία της είναι άριστη και λόγος αντικατάστασής της δεν πρόκειται σε καμία περίπτωση να προκύψει. Αν όμως, παρόλα αυτά, κάποιο εξάρτημα δεν λειτουργήσει, το εξάρτημα αυτό και η εργασία επισκευής παρέχονται από την Εταιρία δωρεάν. Η προσκομιζόμενη για επισκευή συσκευή πρέπει να συνοδεύεται απαραίτητα από το ΔΕΛΤΙΟ ΔΙΑΝΚΗΣ ΠΩΛΗΣΕΩΣ, ή φωτοτυπία του, και το παρόν έντυπο συμπληρωμένο και σφραγισμένο από το κατάστημα αγοράς του.

Η εγγύηση ισχύει για ΕΝΑ έτος, από την ημερομηνία αγοράς. Η εγγύηση δεν ισχύει στις παρακάτω περιπτώσεις:

α. Για αναμάλια όχι από βλάβη της συσκευής, αλλά από φθορά ή βλάβη, που προκλήθηκε από τρίτους ή από μεταβολή της τάσεως του ηλεκτρικού ρεύματος.

β. Για αναμάλια λόγω ελαττωματικής εγκαταστάσεως της συσκευής.

γ. Όταν ο αριθμός κατασκευής της συσκευής έχει αλλοιωθεί.

δ. Για κεραλές πίκ-άπ και μικρόφωνα.

Η εργασία επισκευής γίνεται στα Εργαστήρια της Εταιρίας, όπου ο πελάτης πρέπει να μεταφέρει τη συσκευή με δική του δαπάνη.

Κανένας αντιπρόσωπος δεν έχει το δικαίωμα αλλαγής των όρων εγγυήσεως. Μετά τη λήξη του χρόνου εγγυήσεως, για κάθε πρόβλημα συντηρήσεως, επισκευής ή συμβουλής, σας συνιστούμε να απευθυνθείτε στα κατά τόπους Service της Εταιρίας.

Διεύθυνση Κεντρικών SERVICE PHILIPS:

25ης Μαρτίου 15, 177 78 Ταύρος - ☎ 4894.911

Τοιμητή 62, 546 93 Θεσσαλονίκη - ☎ 260 - 621

Guarantee certificate
Certificat de garantie
Garantieschein
Identificatiekaart
Certificado de garantia
Certificato di garanzia
Garantibeviset
Takuutodistus
Εγγύηση

Type plate

Date of purchase – Date d'achat – Kaufdatum
Koopdatum - Fecha de compra – Data da compra
Data di acquisto – Købsdato – Kjøpedato
Inköpsdato – Ostópáivä – Ημερομηνία αγοράς

Day

Month

Year 19

Dealer's name, address and signature
Nom, adresse et signature du revendeur
Name, Anschrift und Unterschrift des Händlers
Naam, adres en handtekening van de handelaar
Nombre, dirección y firma del distribuidor
Nome, indirizzo e firma del fornitore
Nome, morada e assinatura da loja
Forhandlerens navn, adresse og underskrift
Återförsäljarens namn, adress och namnteckning
Myyjän nimi, osoite ja allekirjoitus
Όνομα/Επώνυμο αντιπροσώπου

Dealer: